

COMPACT SCALE S110



Brand: Scaleson

- Small handy compact scale for check weighing and mobile use
- Particularly suitable for weighing smaller objects
- Maximum load 5 kg, division 1 g
- Easy-to-read LC display



Product Description

The compact scale can be used universally - in the warehouse, in shops, in shops or for weighing in the household. An extra washable and removable stainless steel platform enables quick and clean cleaning of the scale. The scale itself consists of a robust but at the same time lightweight ABS plastic housing.

With the two buttons "On/Tare" and "Off", the scale can be operated very easily. The tare function allows the weight to be determined without a container, i.e. the weight of the container is subtracted and the pure net weight is displayed. With the mode key, the unit can be changed from kg to lbs.

The scale can be operated via mains operation (optional) or battery operation. If the scale is without operation or weight change, it switches off after 3 minutes. If desired, this value can be changed to 0, 1, 5, 10, 30 minutes.

Functions:


Weighing, taring, auto-off function

Wide range of applications...



In the warehouse

The compact scale S110 is particularly suitable for use in the warehouse. It is compact, handy and can also be used as a mobile scale thanks to the optional battery operation. This allows you to flexibly carry out short checkweighing operations at any time.

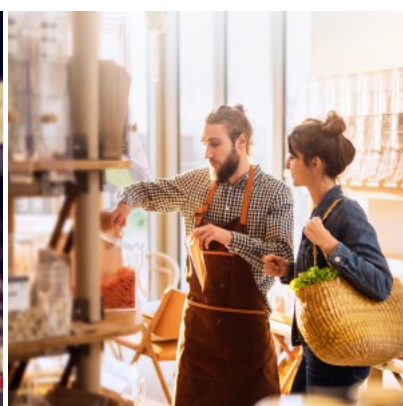

In retail & at markets

The Scaleson compact scale S110 can also convince in retail and markets. It can be used as a checkweigher for quick and easy weight control of food, ingredients and other products.



In the household

The Scaleson compact scale S110 is the perfect helper in the kitchen - whether cooking or baking, the right amount of the respective ingredients is a prerequisite for success. With the help of the tare function, you can easily mix several ingredients together. Simply press the "ON/TARE" button after each ingredient to reset the scale to zero.

The special feature of our S110 compact scale...



Easy to use

The scale can be operated very easily with the two keys "ON/TARE" and "OFF". The tare function allows the weight to be determined without a container. With the mode key, the unit can be changed from kg to lbs.




Easy-to-read display

The easy-to-read LC display with a digit height of 15 mm allows you to easily and conveniently read off the weight values determined.



Anti-slip

The underside of the scale is equipped with four rubber feet. This always ensures a secure hold on a wide variety of surfaces.

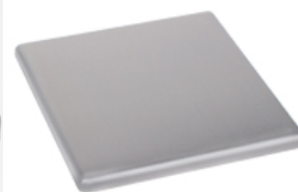

Removable stainless steel platform

The removable stainless steel platform allows the scale to be cleaned quickly and cleanly.

[Download User instructions](#)

Technical Data

Artikelnummer	S110.02.005
Maximum load	5 kg
Division	1 g
Dimensions	180 x 255 x 68 mm
Platform size	170 x 178 mm
Anzeige	LC-Display, 45 mm x 19 mm
Stromversorgung	Netzgerät: 6V-Adapter oder 1 x 9 V-Batterie (nicht im Lieferumfang enthalten)
Abschaltzeit	Wählbar 0 – 30 Minuten. Standardeinstellung: 3 Minuten
Betriebstemperatur	5° – 40° C / 41° – 104° F
Wäge-Einheiten	kg/g, lb/oz, oz