

STAINLESS STEEL BENCH SCALE S120



Brand: Scaleson

- Hose-proof compact scale made of stainless steel. Protection class IP 68
- Ideal for use with food and for hygienic cleaning
- Maximum load 6 kg, division 1 g
- Easy-to-read LC display with backlight



Product Description

The small, handy table scale is made entirely of stainless steel. It can be completely cleaned with wet cloths or under water and is therefore ideal for use with food. For example, in production, in further processing, as well as in large kitchens and for weighing liquid materials.


The scale can be easily operated via four large keys. The tare function makes it possible to weigh objects in containers. The weight of the container is subtracted and the scale displays the pure net weight. The counting function calculates the number of pieces of the load to be weighed. The check weighing or data comparison function allows the user to enter a preset range and the display shows whether the weighed value is within this range or whether it is too high or too low.

The scale can be charged via an integrated charger. The battery charge level is shown in the display. If the scales are without operation or weight change for 10 minutes they switch off automatically.

Functions:

Weighing, taring, counting, checking, auto-off function.

Wide range of applications...

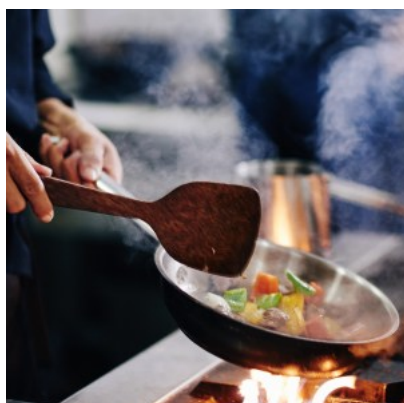

In commercial kitchens

The stainless steel bench scale S120 is particularly suitable for use in commercial kitchens. Due to the IP 68 protection class, it can be cleaned under running water and thus remains hygienically clean. In addition, the scale is very robust and durable due to its stainless steel design.



In bakeries

The Scaleson stainless steel bench scale S120 can also be used in bakeries without any problems. Thanks to the IP 68 protection class, the scale is excellently protected against ingress of ingredients such as flour or flour dust. In addition, the scales can be easily cleaned with water after use.



At markets & in farm shops

As a checkweigher, the Scaleson stainless steel bench scale S120 can be used for quick and easy weight control of food, ingredients and other products. In addition, the scale is very robust and easy to clean. This makes it ideal for use at weekly markets, in farm shops or by direct producers.

The special feature of our stainless steel bench scale S120...



Easy to use

The scale can be easily operated via four large buttons. The tare function allows you to weigh objects in containers.


The counting function calculates the number of pieces of the load to be weighed.

The check weighing or data comparison function allows the user to enter a preset range and the display shows whether the weighed value is within this range or whether it is too high or too low.



Easy-to-read display

The easy-to-read LC display with backlighting and a digit height of 18 mm allows you to read the weight values determined easily and conveniently.

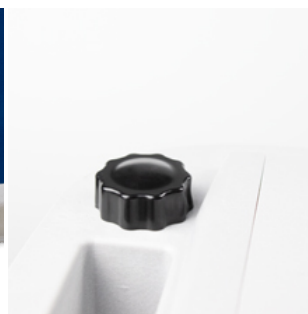

Anti-slip

The underside of the scale is equipped with four rubber feet. This ensures a secure hold on a wide variety of surfaces.

In addition, the scale has a spirit level for alignment on uneven surfaces.



Protection class IP 68

Thanks to protection class IP 68, the Scaleson stainless steel bench scale S120 is optimally protected against water jets and dust.

The scale is therefore ideal for use with food, as hygienic cleaning is possible without any problems.

[Download User instructions](#)

Technical Data

Artikelnummer	22-C09X-BVAP
Maximum load	6 kg
Division	1 g
Schutzart	IP 68
Maximaler Wägebereich	100% des maximalen Wägebereichs
Dimensions	265 x 240 x 98 mm
Platform size	176 x 222 mm
Anzeige	LCD
Stromversorgung	Wiederaufladbare 6-V-Blei-Säure-Batterie mit 2,3 Ah (nicht im Lieferumfang enthalten) oder integriertes Netzteil
Wäge-Einheiten	kg, g, lb, lb:oz, pcs